

CakeSafe Wide Spray Booth Setup

Step 1:
Place the 2 fans boxes
side by side



Step 2:
Attach the side panels as
shown




Step 3:
Place the top panel on by
inserting the tabs on the
side panels in the slots



Step 4:
Power both fans boxes by
using an approved dedicated
circuit or power strip



Step 5:
With both fans running,
hold the prefilter in front
of the fan box and let it go

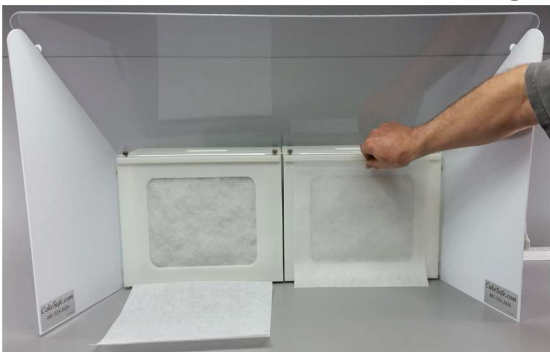

Step 6:
We do recommend using
paper to cover your work
surface to make cleanup easier.



We recommend replacing the pre filter at the end of each day or if you notice a reduction in suction from the fans. Clean the top and side panels with a non abrasive cleaner.